THE SHARPER IMAGE®

Ultrasonic Jewelry Cleaner

SI414 Instructions

SHARPER IMAGE DESIGN™

CONTAINS IMPORTANT SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS

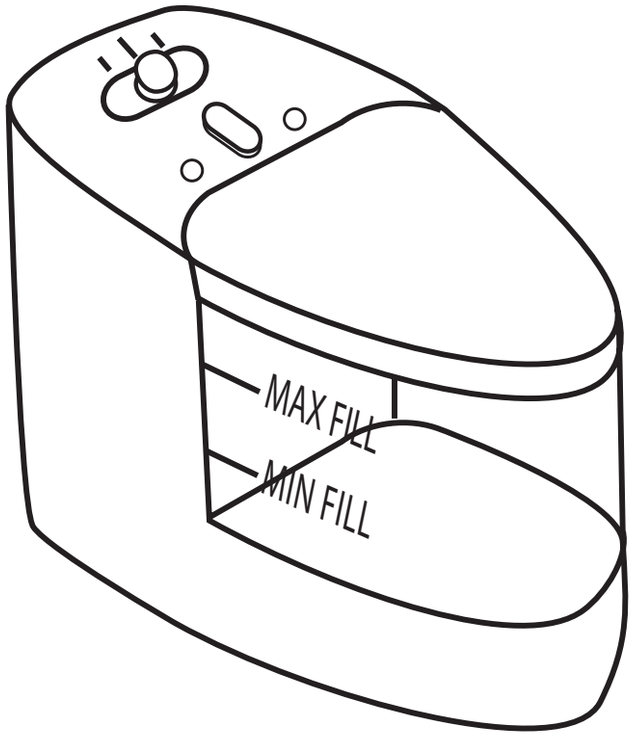

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electrical shock:

- Always unplug this unit immediately after using.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- If appliance falls into water, unplug it immediately. Do not reach into the water while the unit is plugged in.
- There are no user serviceable parts. If the unit becomes damaged in any way, please return it to The Sharper Image for service.

WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on or near children, or physically challenged persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

SAFETY INSTRUCTIONS continued next page

IMPORTANT SAFETY INSTRUCTIONS

WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center or place of purchase for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Unplug the unit before filling. Do not overfill.
- Never use without proper volume of liquid in the cleaning tank. Do not operate with empty tank.
- Base of unit may be hot during use. Allow it to cool before handling.
- Do not use an extension cord with this appliance.
- Do not operate with a voltage converter.

This appliance is intended for HOUSEHOLD USE ONLY. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized plug outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

Basic Description

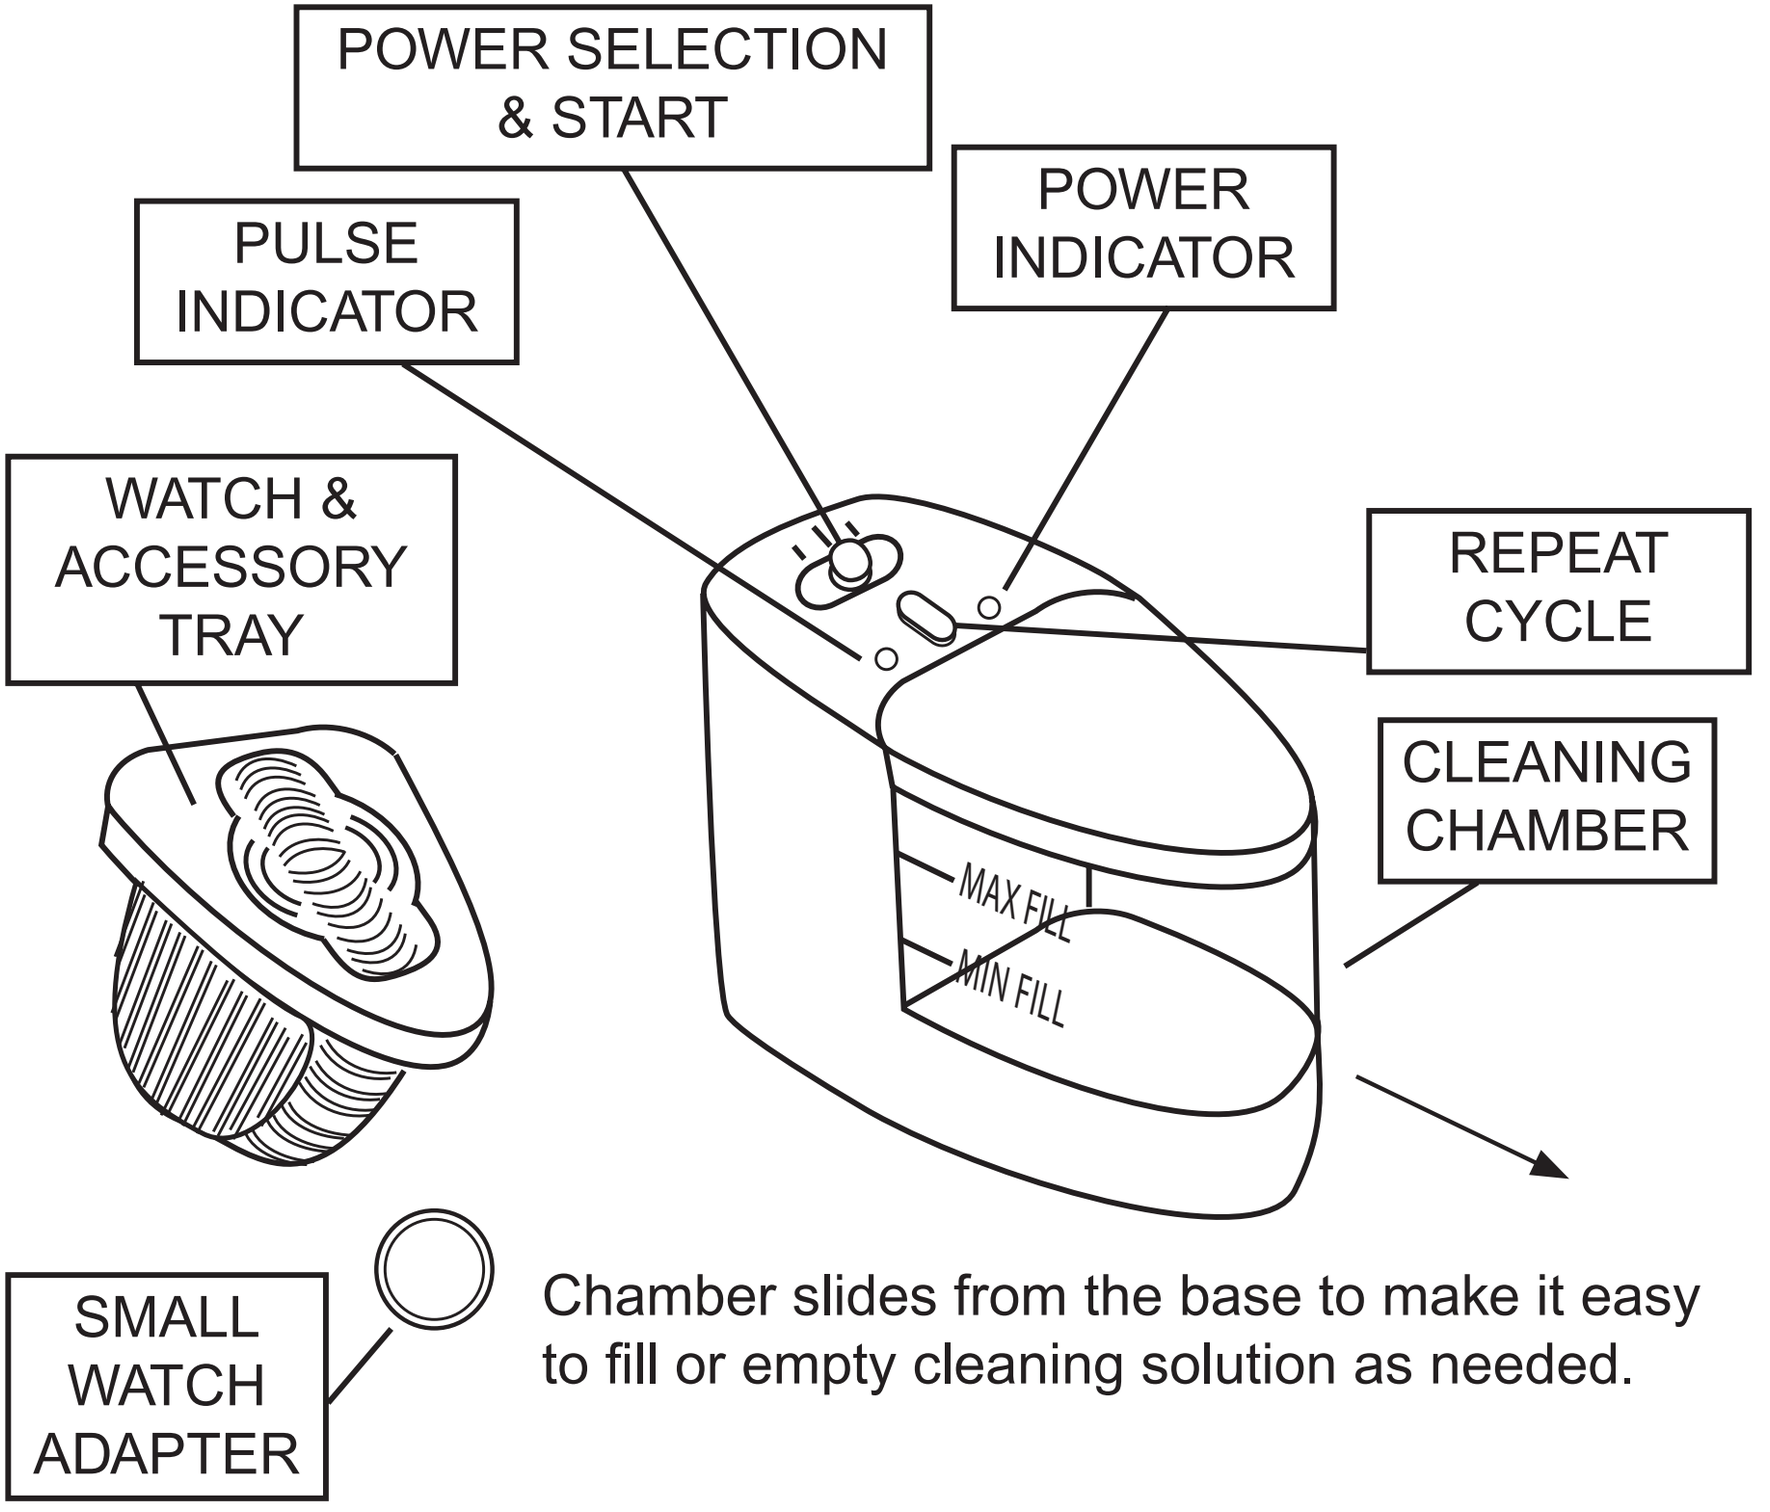

Chamber slides from the base to make it easy to fill or empty cleaning solution as needed.

Operation

CAUTION: Do not use this product with any fragile or soft stones (example: emeralds, pearls, opals, amber, etc.) The ultrasonic waves produced by this product could loosen jewelry that is set with glue.

Add 1/2 teaspoon household ammonia (or 2 teaspoons window cleaner) to the chamber. Add water to bring liquid to MAX FILL line indicated on the case.

Place larger items (except watches) directly into the cleaning chamber. If items are small, they can be placed inside the accessory TRAY for easier recovery after cleaning is complete.

Watch bands can be suspended in the tray, with the watch out of the liquid. An adapter piece is included for small watches. (Snap into center of tray.)

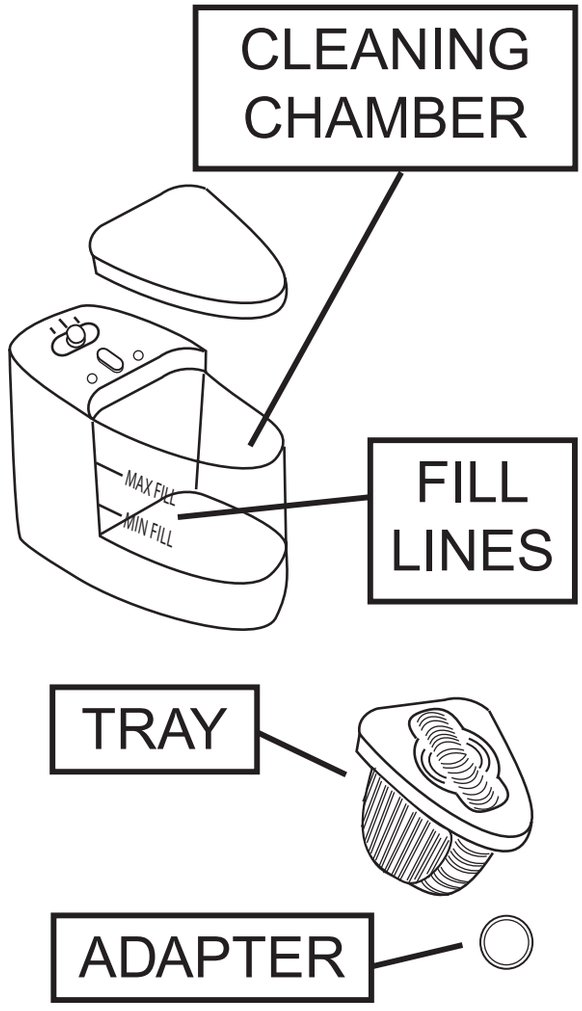

NOTE: One drop of dish washing detergent may be added to the water and ammonia, but use of any other solvents or solutions could damage the unit and are not recommended.

Operation

CAUTION: Allow the unit to cool between uses, 10 minutes (for HIGH) and 3 minutes (for LOW). Never operate this unit without liquid in the chamber.

Plug the cord into outlet.

Switch to NORMAL or HIGH. (Normal is less aggressive on stones and settings.)

Unit pulses for 5 minutes then shuts off automatically.

Cleaning cycle can be repeated by pressing REPEAT CYCLE. (Press again to interrupt and manually stop the cycle.)

Remove jewelry and dry with a soft cloth.

Replace solution as needed.

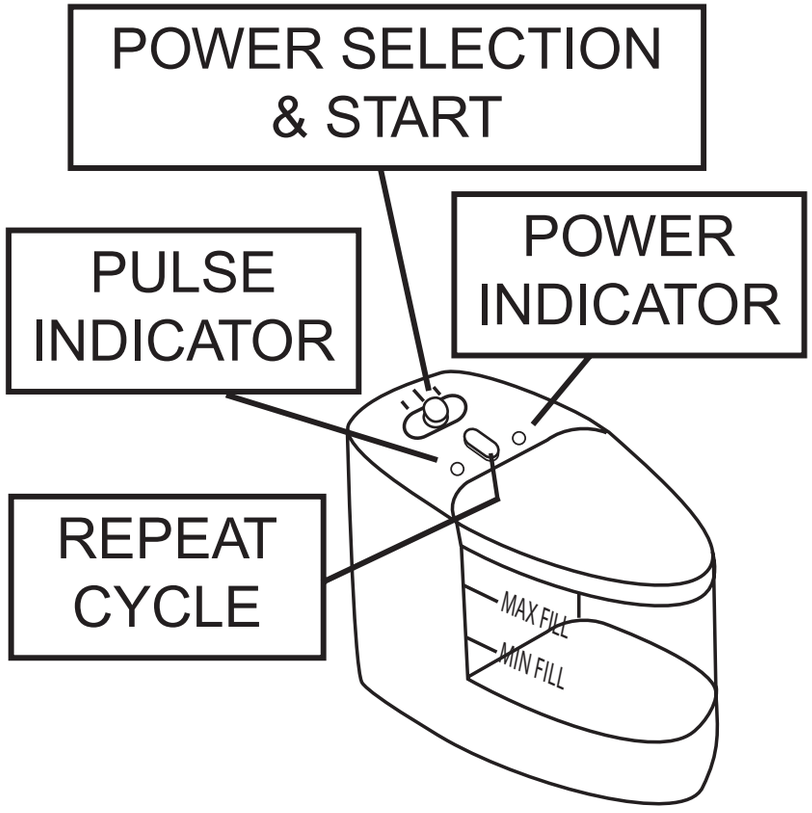

POWER SPECIFICATIONS: AC 120V 60Hz 20W

FULL ONE-YEAR WARRANTY

What is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual.

What The Sharper Image Will Do

The Sharper Image will either repair any defects in materials or workmanship, or exchange the defective unit with a reconditioned unit. In the event repair or exchange is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If You Have Questions

Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2002 Sharper Image Corporation

Printed in China
IMV3